SALADETTE



Models: CRS90G, CRS1360G, SA136G, SA900GS



CE

Installation, Operation & Maintenance Manual

(HC-Gas R290 & R600a used) Table of Contents

Safety	
1	
Introduction	1
Pack Contents	1
Installation	1
Fitting shelves	1
Operation	1
Storing Food	1
Turning on	1
Manual Defrost	1
Cleaning, Care & Maintenance	2
Cleaning the Condenser	2
Troubleshooting	2
Electrical Wiring	
Disposal	3
Compliance	

Safety

- Position on a flat, stable surface.
- A service agent/qualified technician should carry out installation and any repairs if required. Do not remove any components or service panels on this product. Consult Local and National Standards to comply with the following:
 - Health and Safety at Work Legislation
 - BS EN Codes of Practice
 - Fire Precautions
 - IEE Wiring Regulations
 - Building Regulations
- DO NOT use jet/pressure washers to clean the appliance.
- DO NOT use the appliance outside.
- DO NOT use this appliance to store medical supplies.
- DO NOT use electrical appliances inside the appliance. (e.g., heaters, ice-cream makers etc.)
- DO NOT stand or support yourself on the base, drawers or doors.
- DO NOT allow oil or fat to come into contact with the plastic components or door seal. Clean immediately if contact occurs.
- Bottles that contain a high percentage of alcohol must be sealed and placed vertically in the refrigerator.
- Always carry, store and handle the appliance in a vertical position and move by holding the base of the appliance.
- Always switch off and disconnect the power supply to the unit before cleaning.
- Keep all packing away from children. Dispose of the packaging in accordance with the regulations of local authorities.
- If the power cord is damaged, it must be replaced by an agent or a recommended qualified technician in order to avoid danger.

Introduction

Please take a few moments to carefully read through this manual. Correct maintenance and operation of this machine will provide the best possible performance from your product.

Pack Contents

The following is included:

- Refrigerator
- Instruction manual
- Shelf guides
- Gastronorm Adaptor Bars
- Shelves

We pride ourselves on quality and service, ensuring that at the time of packing the contents are supplied fully functional and free of damage. Should you find any damage as a result of transit, please contact your dealer immediately. 3. Set the brakes on the castors to keep the appliance in position OR level the appliance by adjusting the feet.

Fitting the Shelves

- 1. Place one set of shelf guides on either side of the cabinet at the desired height.
- 2. Slide the shelf into place.
- 3. Repeat for the remaining shelves.

Note: This is vital for ensuring correct drainage of condensation.

Operation

Storing Food

To get the best result from your appliance, follow these instructions:

- Only store foodstuffs in the appliance when it has reached the correct operating temperature.
- Ensure gastronorm bays are full at all times, even if the gastronorms are unused or empty. Empty bays will greatly reduce efficiency of the appliance.
- Always close the lid when not in use.
- Do not place uncovered hot food or liquid inside the appliance.
- Wrap or cover food where possible.
- Do not obstruct the fans inside the appliance.
- Avoid opening the doors for prolonged periods of time.

Turning on

- 1. Close the door(s) of the appliance.
- 2. Ensure the power switch is set to [O] and turn on at the socket.
- 3. Turn on the power switch [I]. The current temperature within the appliance is displayed.

Open/Close the Lid (HSA370 Only)

The lid of the HSA370 Saladette Counter is multi-positional:

- 1. With the lid closed, slide the panel back into the half open position. This allows partial access the gastronorm trays.
- 2. Lift the lid up and back so the hinge settles into the support slot.
- 3. Lift the lid up and completely back so the gastronorm trays are completely exposed.
- ▲ WARNING: The sliding lid does not have a locking mechanism. Always make sure that the lid is in the "half-open" position before opening.

Manual Defrost

The appliance will automatically run a defrost cycle every six hours.

Note: The cycle starts from the time the appliance is initially powered up.

Installation

Note: If the unit has not been stored or move in an upright position, let it stand upright for approximately 12 hours before operation. If in doubt allow to stand.

- 1. Remove the appliance from the packaging. Make sure that all protective plastic film and coatings are thoroughly removed from all surfaces.
- Maintain a distance of 20 cm (7 inches) between the unit and walls or other objects for ventilation.
 Increase this distance if the obstacle is a heat source.

Note: Before using the appliance for the first time, clean the shelves and interior with soapy water.

To manually defrost the appliance:

1. Press and hold the DEFROST button for 5 seconds.

 The defrost cycle will start immediately and the Defrost LED illuminates. The defrost will last a maximum of 30 minutes. Note: Starting a manual defrost also resets the automatic defrost timer. The next automatic defrost will start six hours after the manual defrost has finished

3. Waste water is collected in the waste water tray.

Cleaning, Care & Maintenance

- Switch off and disconnect from the power supply before cleaning.
- Clean the interior of the appliance as often as possible.
- 1

- Do not use abrasive cleaning agents. These can leave harmful residues. Do not use wire wool, this will damage the stainless steel.
- Clean the door seal with water only.
- Always wipe dry after cleaning.

· Do not allow water used in cleaning to run through the drain hole into the evaporation pan.

- Take care when cleaning the rear of the appliance. Sharp edges can cut.
- An agent or qualified technician must carry out repairs if ٠ required.

Cleaning the Condenser

Periodically cleaning the condenser can extend the life of the appliance. We recommend that an agent or qualified technician clean the condenser

Troubleshooting

If your appliance develops a fault, please check the following table before making a call to your retailer.

Fault	Probable Cause	Action
The appliance is not working	The unit is not switch on	Check the unit is plugged in correctly and switched on
	Plug and lead are damaged	Call your agent or qualified technician
	Fuse in the plug has blown	Replace the fuse
	Power supply turned off	Check the power supply circuit breaker
	Internal wiring fault	Call your agent or qualified technician
The appliance turns on, but the temperature is too	Too much ice on the evaporator	Defrost the appliance
high/low	Condenser blocked with dust	Call your agent or qualified technician
	Doors are not shut properly	Check doors are shut and seals are not damaged
	Appliance is located near a heat source or air flow to the condenser is being interrupted	Move the refrigerator to a more suitable location
	Ambient temperature is too high	Increase ventilation or move appliance to a cooler position
	Unsuitable foodstuffs are being stored in the appliance	Remove any excessive hot foodstuffs or blockages to the fan
	Appliance is overloaded	Reduce the amount of food stored in the appliance
	The appliance is not properly levelled	Adjust the feet to level the appliance (If applicable)
	The discharge pipe is blocked	Clear the pipe
The appliance is leaking water	The flow of water to the drain is obstructed	Clear the floor of the appliance (if applicable)
	The water container is damaged	Call your agent or qualified technician
	The drip tray is overflowing	Empty the drip tray (if applicable)
The appliance is unusually loud	Loose nut/screw, fan faulty	Check and tighten all nuts and screws, check the fans
	The appliance has not been installed in a level or stable position	Check the installation position and change if necessary

Electrical Wiring

Appliances are supplied with a 3 pin, moulded, BS1363 plug and lead, with a 13-amp fuse as standard. The plug is to be connected to a suitable mains socket. Appliances are wired as follows:

• Live wire (coloured brown) to terminal marked L

- Neutral wire (coloured blue) to terminal marked N
- Earth wire (coloured green/yellow) to terminal marked E

All appliances must be earthed, using a dedicated earthing circuit.

If in doubt consult a qualified electrician.

Electrical isolation points must be kept clear of any obstructions. In the event of any emergency disconnection being required, they must be readily accessible.

2

R290 / R600a refrigerant is used for this equipment.



Caution!

Consult repair manual/owner's guide before attempting to install or service this product. All safety precautions must be followed. Dispose of the unit in accordance with government or local regulations. There is a risk of fire or explosion if the refrigerant piping is punctured. Follow the handling instructions carefully.

Danger!

Risk of fire or explosion. Flammable refrigerant used. To be repaired only by trained service personnel. Do not use mechanical devices to defrost refrigerator. Do not puncture refrigerant piping.



Disposal

EU regulations require refrigeration products to be disposed of by specialist companies who remove or recycle all glasses, metal and plastic components.

Consult your local waste collection authority regarding disposal of your appliance. Local authorities are not obliged to dispose of commercial refrigeration equipment but may be able to offer advice on how to dispose of the equipment locally.

All packaging materials should be disposed of in an environmentally friendly way.

The cardboard may be used as scrap paper. The protective foil and the foam cushions are CFD-free.

Do not allow children to play with the packaging and destroy plastic bags safely.



Environmental protection

Discarded electric appliances are recyclable and should not be discarded with domestic waste! Please actively support us in conserving resources and protecting the environment by returning this appliance to the collection centre (if available).

Compliance

Parts have undergone strict product testing in order to comply with regulatory standards and specification set by international, independent, and federal authorities.

